




Step 1: Making rib 'Stern-A'

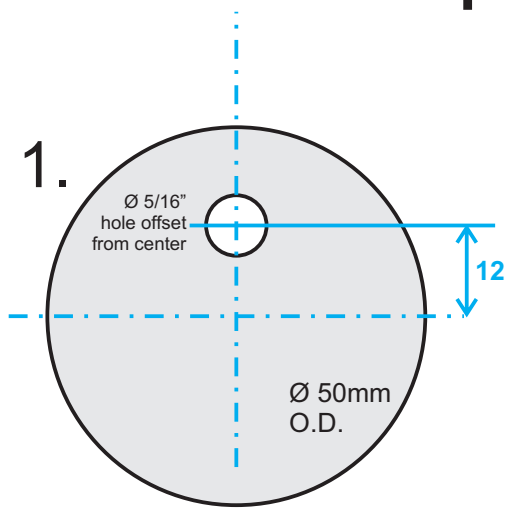

1. Cut 50mm disk from 0.080" plastic. Drill 5/16" hole offset from center by 12mm as shown.


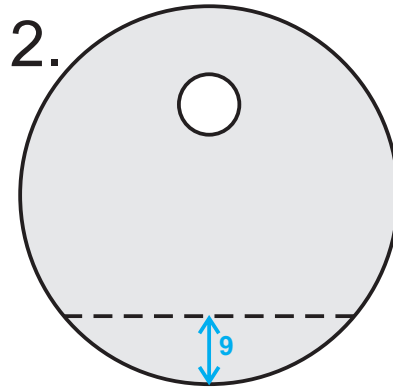


2. Cut off 9mm-high segment as shown. Do not discard.

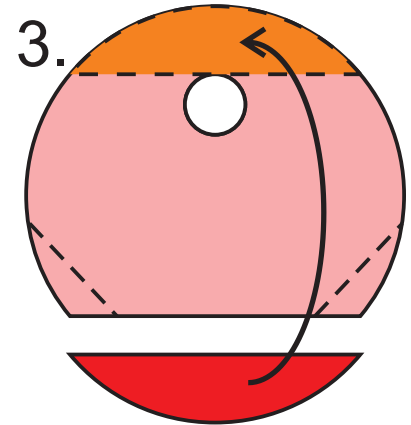


3. Glue the previously-cut segment to the other side as shown, edges flush.

Cut 2 angled sections from sides as shown, and discard.

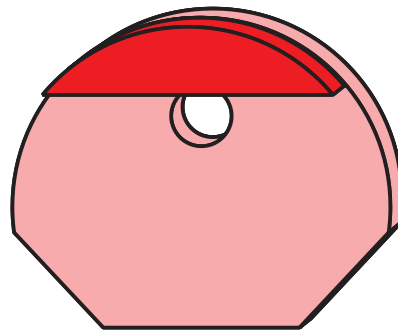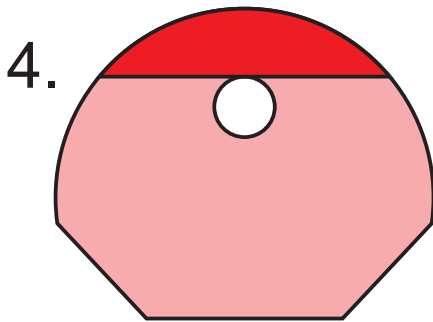

4. Completed rib 'Stern-A'




Step 2: Making rib 'Stern'

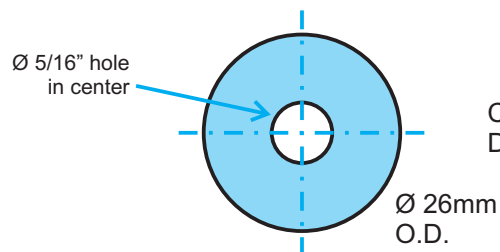


- Cut 26mm disk from 0.080" plastic. Drill 5/16" hole in center.

Ø 26mm
O.D.


Step 3: Assembling 'Stern'

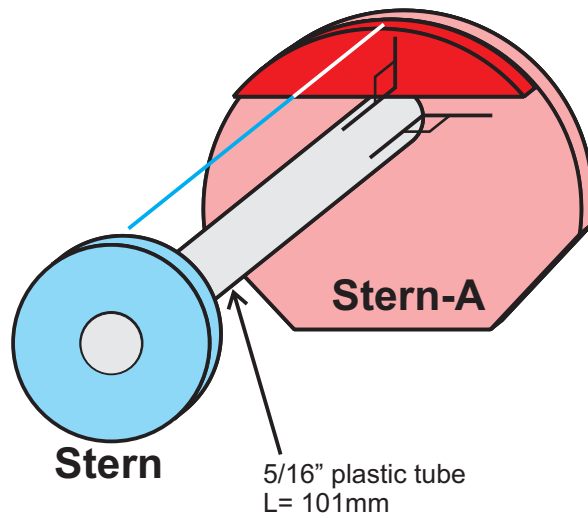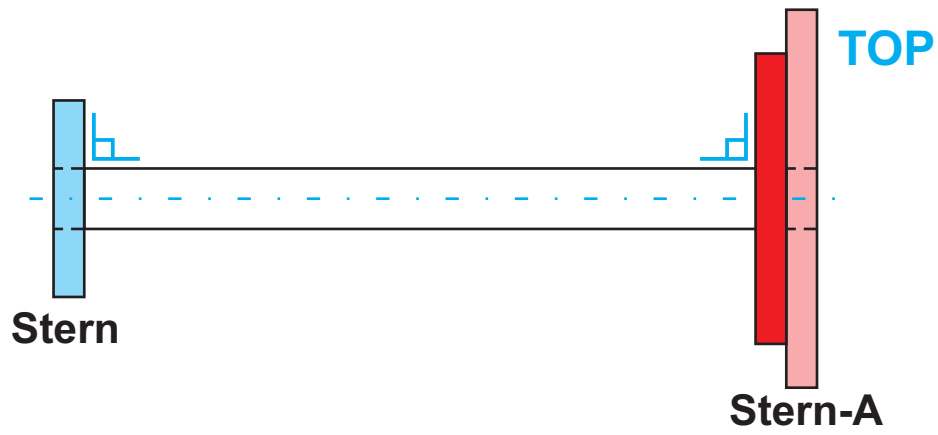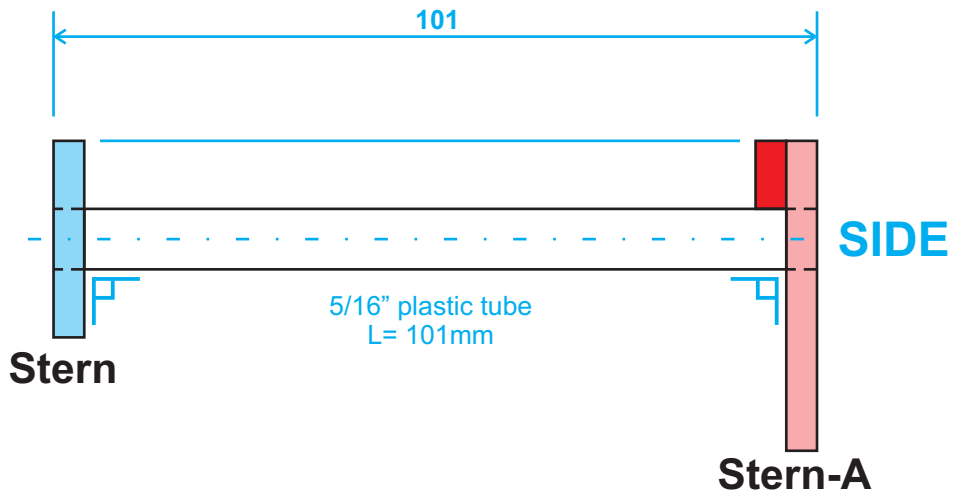

Step 4: Skinning 'Stern'

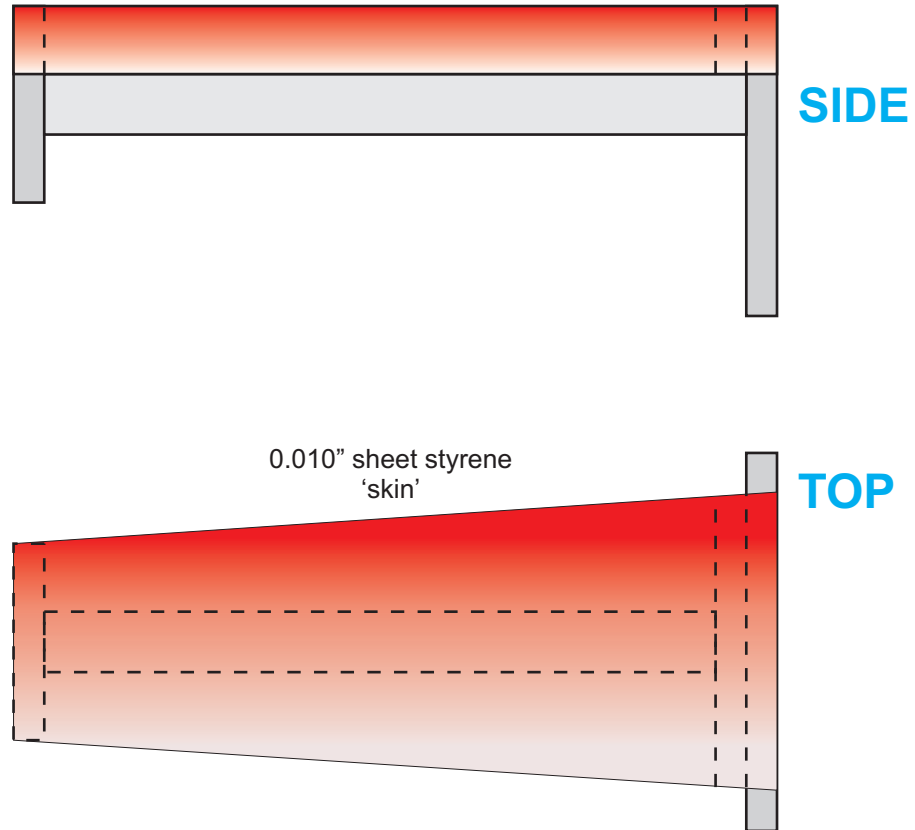

Step 5: Installing 'Stern'

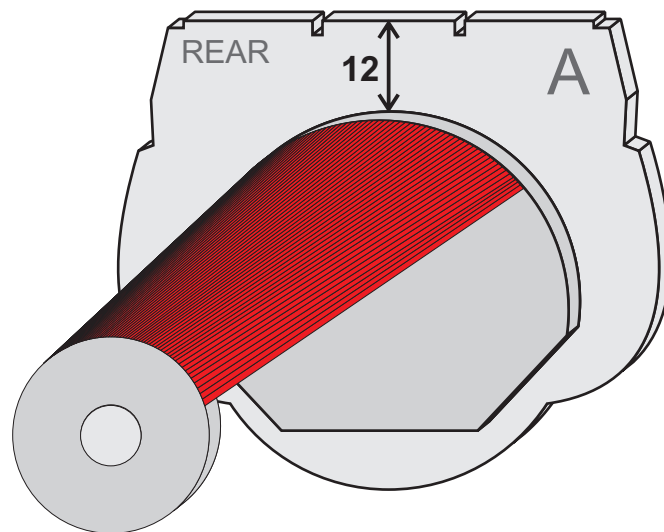

Glue the entire 'Stern' assembly to the rear of bulkhead A, so the top center of rib 'Stern-A' is 12mm from top of the bulkhead.